




HYB-LTT-01-01

Follow the notes in this guide to aid in installing your low temp thermostat.

Written By: Hybrid Racing



Step 1 — Install correctly

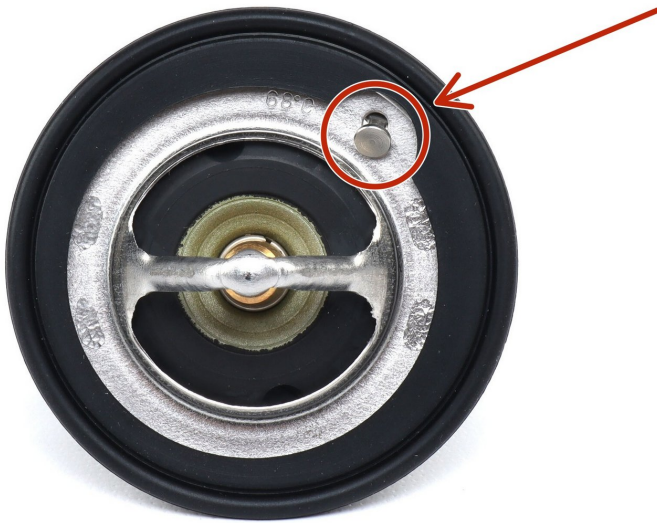

- Make sure the pin valve is at the top when installed. Do not install it upside down; otherwise, air will get trapped, and it will not bleed properly.


Step 2 — Gasket



i Confirm rubber gasket is oriented correctly.


- The nipples on the rubber gasket should face the same direction as the spring.

Step 3 — D-Series / B16

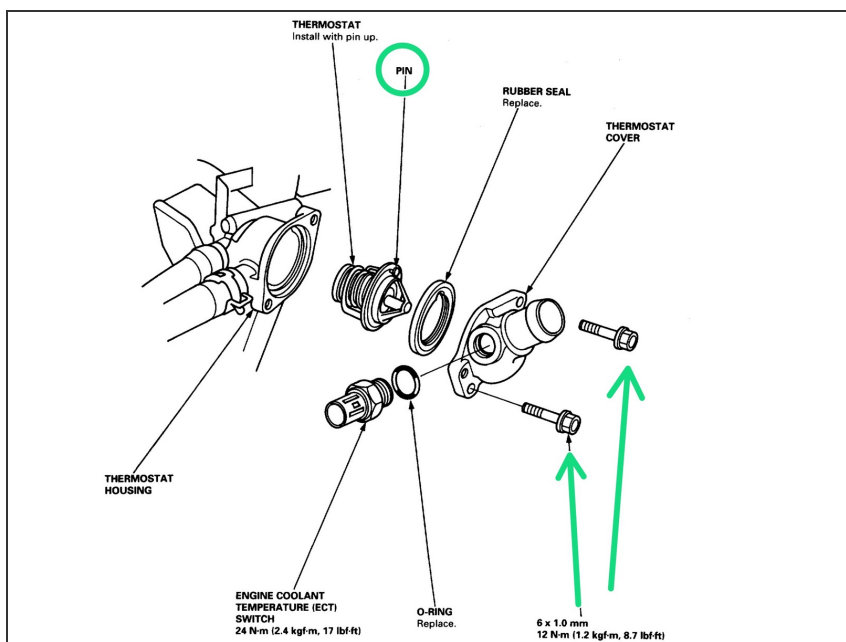

- Make sure the pin valve is at the top.
Do not install it upside down.
- Torque bolts to 8.7lb ft.


Step 4 — B18

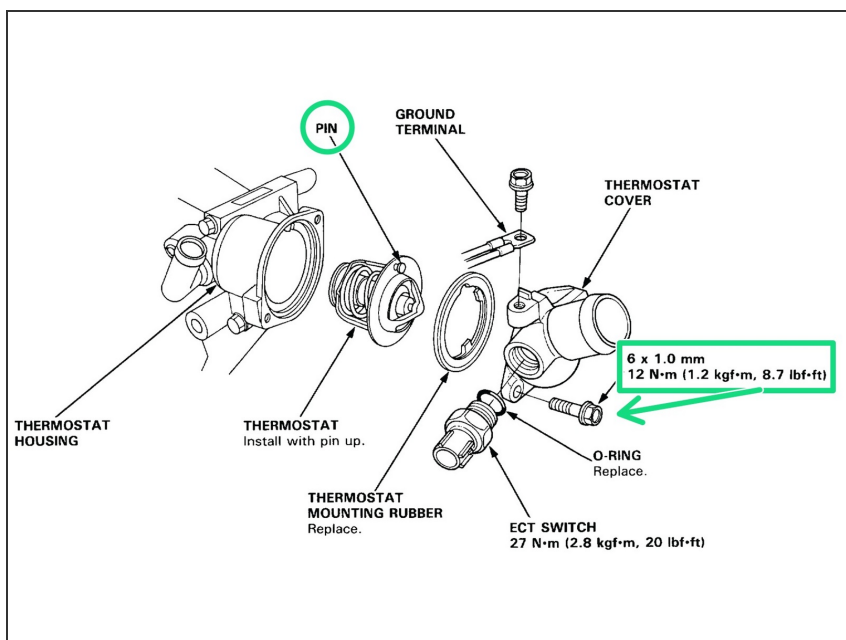

- Make sure the pin valve is at the top.
Do not install it upside down.
- Torque bolts to 8.7lbft.


Step 5 — F20B

NOTE: Use new O-rings when reassembling.

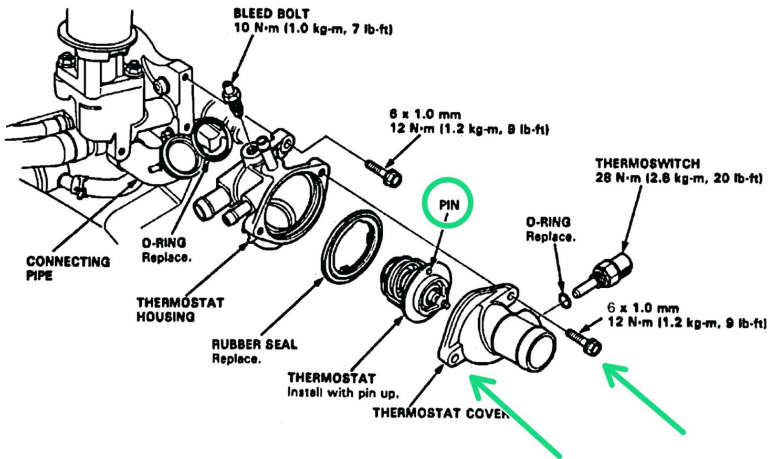

- Make sure the pin valve is at the top.
Do not install it upside down.
- Torque bolts to 8.7lbft.

Step 6 — L15B7

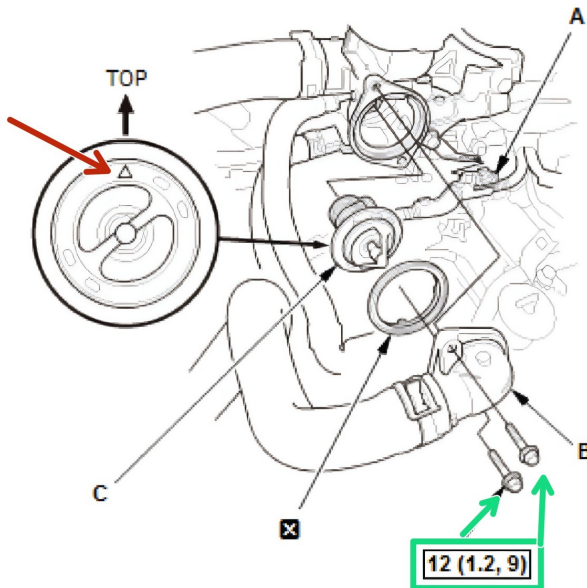

- Make sure the pin valve it at the top.
Do not install it upside down.
- ⓘ This is for the L15B7 engine only.
- Torque bolts to 9lbft.