




Install HYB-LTT-01-15

Use the notes in this guide to aid in installing this thermostat.

Written By: Hybrid Racing

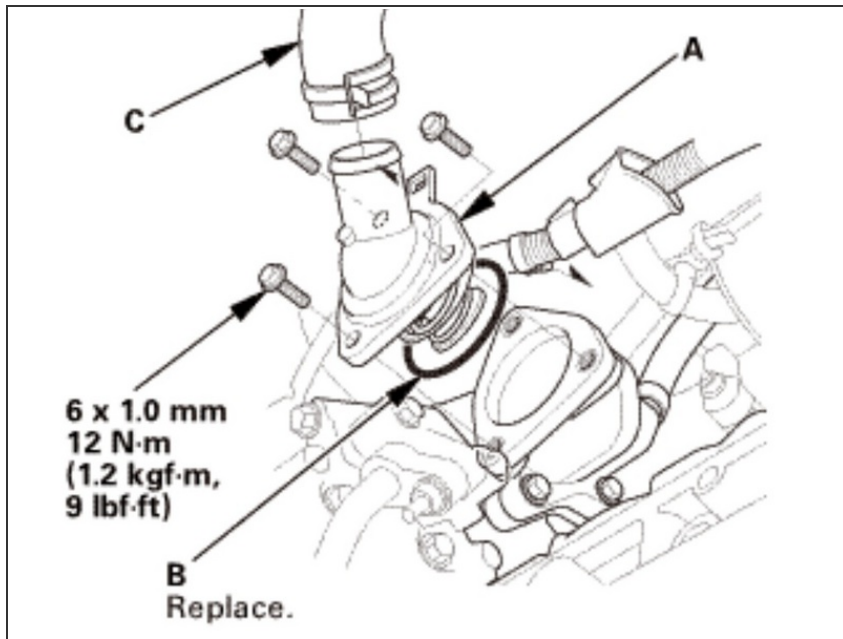

Step 1 — K20Z3/K24Z

- Install the housing correctly, based on the OEM version. Make sure the housing is facing the correct way.
- Torque bolts to 9lbf·ft.