




Civic Type R K20C

Written By: Hybrid Racing



Step 1 — Installation

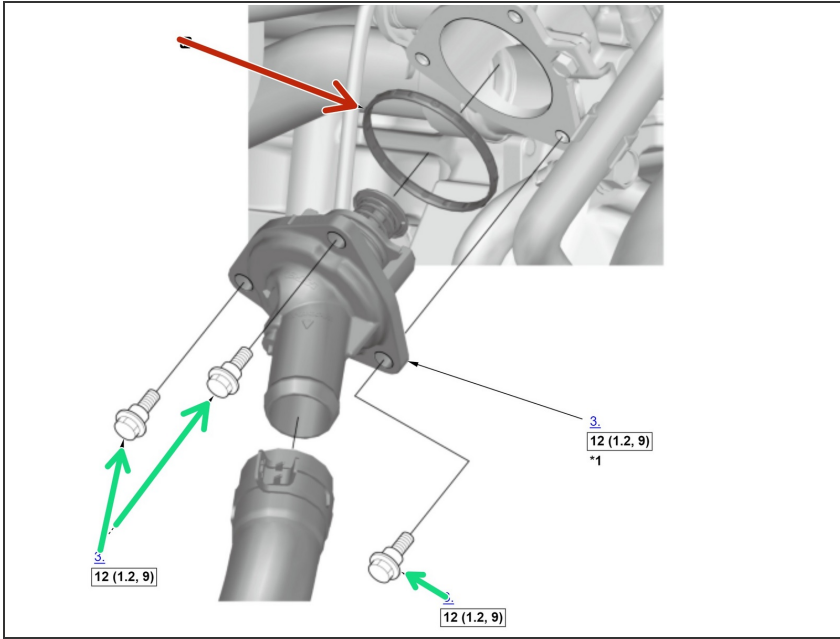

⚠ Ensure the o-ring is installed evenly and is not damaged.

- Drain engine coolant enough so the remaining level is lower than the upper radiator hose.
- Disconnect the upper rad hose from the engine thermostat housing.
- Remove the three 10mm M6 bolts that hold the housing in place.
- Install the Hybrid Racing thermostat and torque bolts to 9ftlb.